



Thank you for purchasing a PocketWizard Remote Camera Cable Adapter!

Included:

1 Pre-Trigger Mono Miniphone (PTMM) Adapter

From: 1/8" (3.5 mm) mono miniphone male (PocketWizard radio)

via: Pre-Trigger / Shutter release half-press switch


To: 1/8" (3.5 mm) stereo miniphone female (-ACC cable)

Requires -ACC Remote Camera Cable (not included):

www.pocketwizard.com/support/cable_finder/

Instructions:

1. Connect PTMM mono miniphone male to PocketWizard radio
2. Connect -ACC cable (not included)
3. Connect -ACC cable to camera remote shutter release terminal
4. Use PTMM switch to control camera's shutter release half-press at camera position

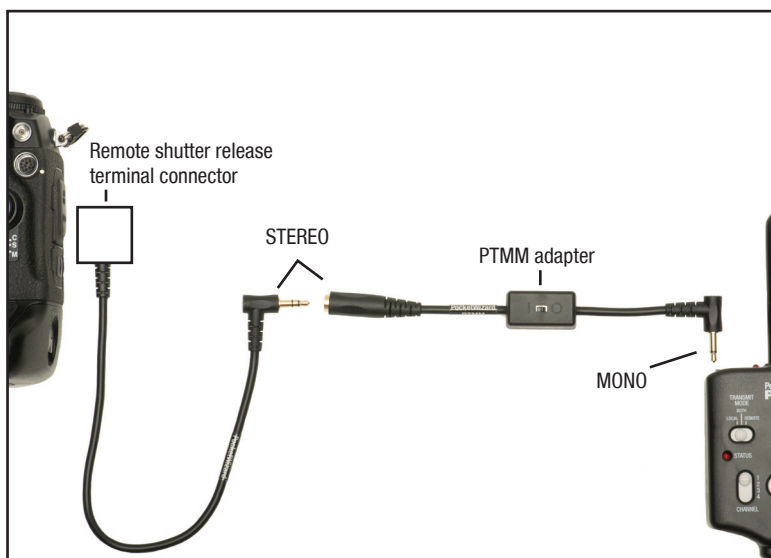

Compatible with all Plus®, MultiMAX®, and FlexTT5® radios.

Note:

(-ACC cable) + (PTMM) = Legacy Pre-Trigger (-P) cable.

See radio manuals for more info:

www.pocketwizard.com/support/manual/



Pre-Trigger

Normal

Pre-Trigger / Continuous shutter release half-press

- *Camera continuously meters and focuses (if set)*
- *Reduces lag time / more consistent lag time*
- *Camera uses batteries faster*
- *Image review not available*
- *Some camera controls (menus) not available*

Normal

- *Camera meters and focuses only when triggered*
- *Lag time affected by focus time*
- *Camera uses batteries normally*
- *Image review available*
- *All camera controls available*

Visit the PocketWizard wiki and website for more information:

www.wiki.pocketwizard.com

www.pocketwizard.com